

# MACP302 series

AIR UNIT (F.R.L.UNIT)




Option: MP41



Option: MLF300

## Symbol

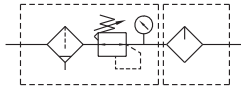

## Specification

Model	MACP302		
Components	MAFR302, MAL302		
Bore No.	8A	10A	15A
Port size	1/4	3/8	1/2
Medium	Air		
Operating pressure range (*)	0.05~1 MPa		
Proof pressure	1.5 MPa		
Regulated pressure range	0.05~0.85 MPa		
Ambient temperature	- 5~+60°C (No freezing)		
Filter element	Standard: 5µm, Option: 40µm		
Lubricating oil capacity	65c.c		
Min. flow for oil drip	50 l/min	60 l/min	
Recommended lubricating oil	Turbine oil ISO-VG32		
Attachment	Pressure gauge(PG-20),T-type bracket		
Weight	845 g		

\* Standard unit contains semi-auto-drain function when operating pressure below 0.05 MPa.

\* Choose auto-drain FMRF300, the pressure range is 0.15~1 MPa.

## Order example

MACP302 – 8A – NC□□□ – E1 – □ – T8 – HR – □

MODEL

PORT SIZE

8A: 1/4  
10A: 3/8  
15A: 1/2

(Option)  
PRESSURE  
SWITCH

E1: MP41P-022  
E2: MP41P-022-QD  
E5: MP41P-042  
E6: MP41P-042-QD

\* Refer to page 5-13 for MP41.

FILTER  
ELEMENT

Blank: 5µm  
40u: 40µm

(Option)  
BY-PASS PORT SIZE

T type bracket	T8: 1/4 T10: 3/8 T15: 1/2
Check valve (*3)	K8: 1/4 K10: 3/8

PORT THREAD  
Blank: Rc thread  
G: G thread  
NPT: NPT thread

(Option)

SHUTOFF VALVE

HR: MVHR-302-3H  
1: MVHR-302S-3H-AC110  
1L: MVHR-302S-3H-AC110-L  
1E: MVHR-302S-3H-AC110-E  
2: MVHR-302S-3H-AC220  
2L: MVHR-302S-3H-AC220-L  
2E: MVHR-302S-3H-AC220-E  
4: MVHR-302S-3H-DC24  
4L: MVHR-302S-3H-DC24-L  
4E: MVHR-302S-3H-DC24-E

(Option)

Bowl	Pressure gauge (*1)	Drain valve (for MAFR302)	Float switch (for MAL302)	Flow direction
Blank: PC bowl M: Metal bowl N: Nylon bowl	Blank: Pressure gauge (PG-20) C: External pressure gauge (PG-40) + Gauge adapter set (A-MAR302) A: Gauge adapter set (A-MAR302)	Blank: Semi-auto drain D: Auto drain valve (FMRF300)	Blank: without F: with (MLF300)(*2)	Blank: Left to right R: Right to left

\*1. PG-40 (C), A-MAR302 (A) and MP41 (E\*) can not be selected at the same time.

\*2. The float switch (F) is only suitable for metal bowl (M). Please refer to page 4-\*\*.


\*3. Be sure to use above check valves when redirecting the air flow on the inlet side of the lubricator.

## Caution


### Metal bowl

Before assembling or disassembling, push the lock plate down to the end, and confirm that is detached from the body then rotate the bowl, otherwise the lock plate will be deformed or the body will be scratched.



1. Sliding plate down

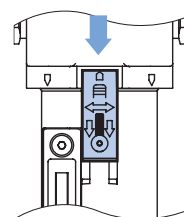

2. Rotating the bowl

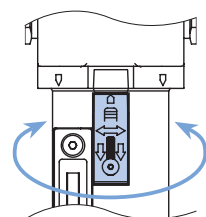

## Flow feature

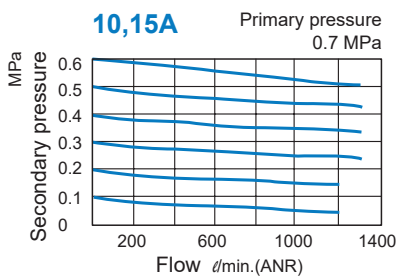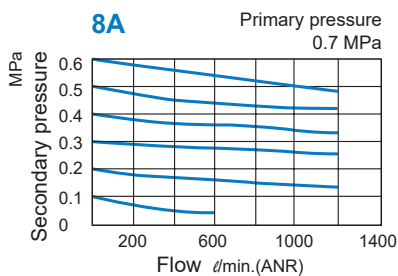


# MACP302 Dimensions

AIR UNIT (F.R.L.UNIT)




## Accessories

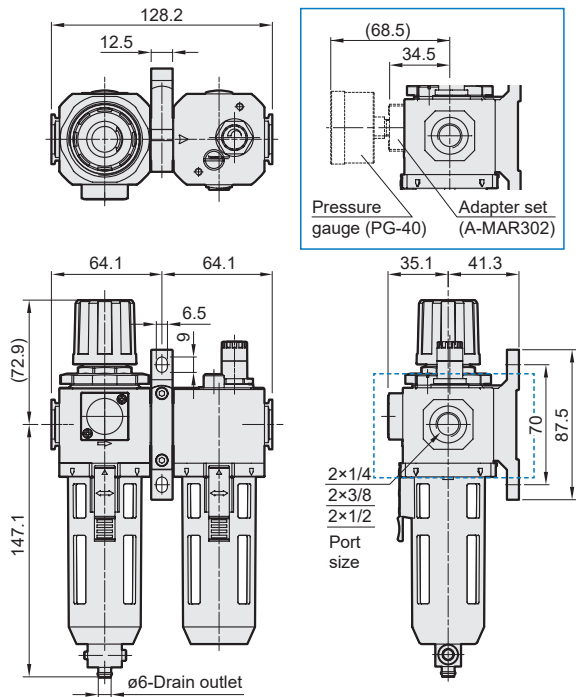


## MACP302-D

Auto drain valve

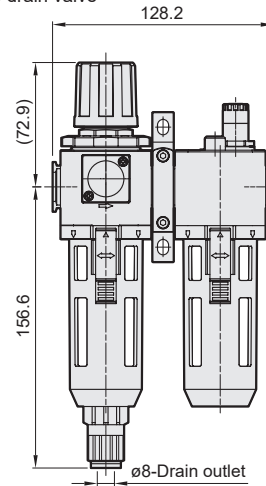


## MACP302-M

Metal bowl

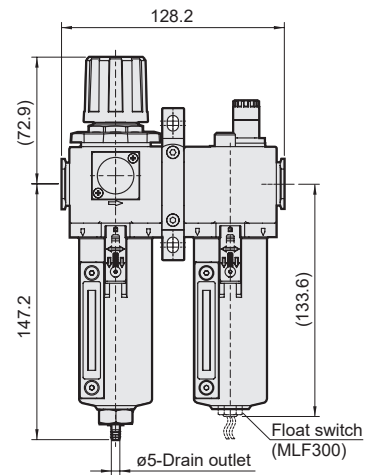


## MACP302-T\*

T type bracket

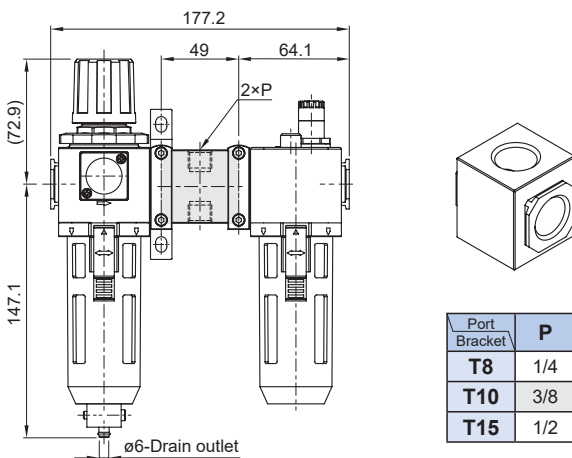


## MACP302-K\*

Check valve

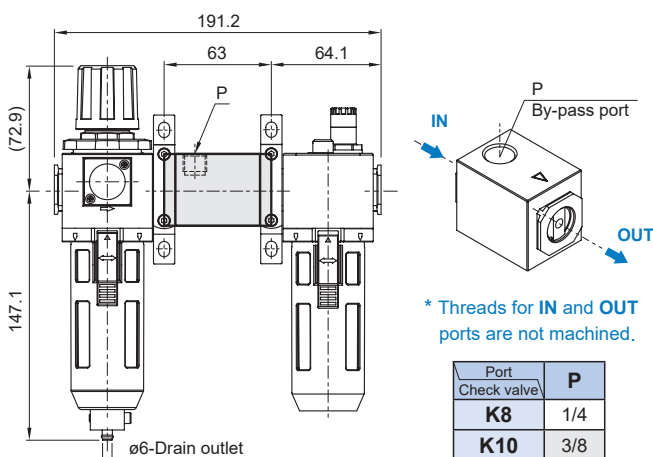

## MACP302-MD

Metal bowl + Auto drain valve

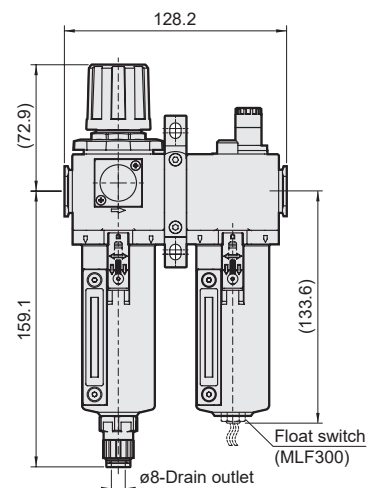

# MACP302-HR With shutoff valve



AIR UNIT (F.R.L.UNIT)





mindman

## MACP302-HR

With shutoff valve (MVHR-302)

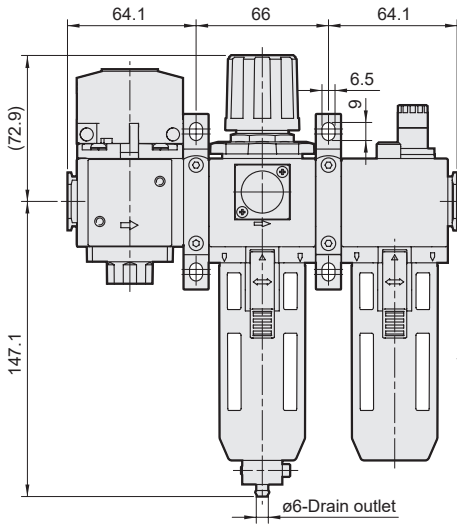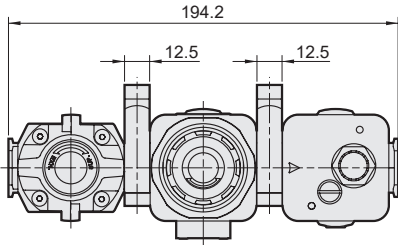

## Accessories

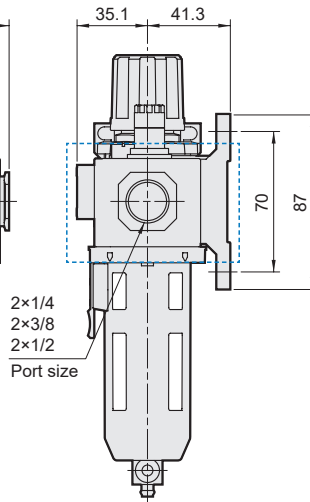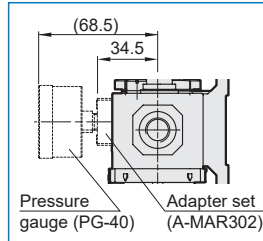

## MACP302-1\*1/2\*1/4\*

With shutoff valve (MVHR-302S)

